



CREATOR

6911



3 IN **1**

 


1




2


2

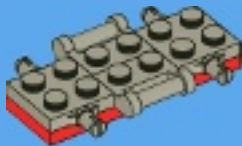

3

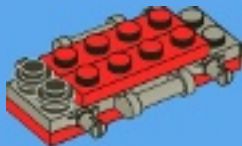 

1

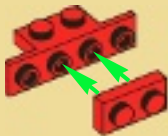 


2




4



 5

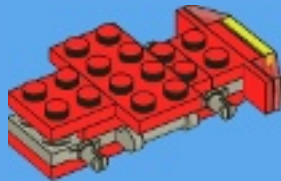

6

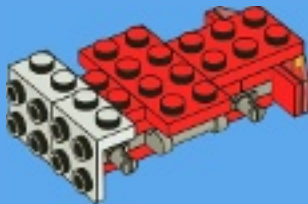 

1



2



3

 


4


7




8

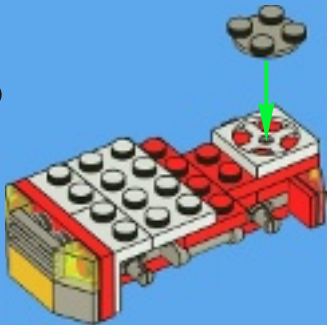

9

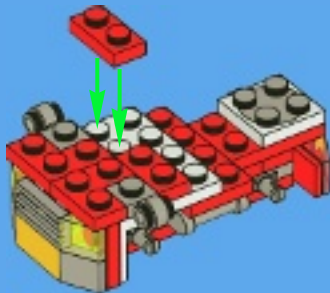 


10

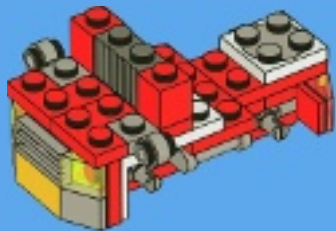 

6

 
11

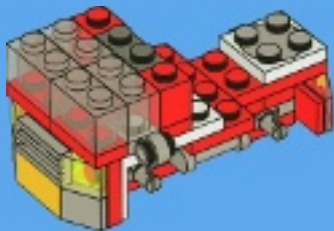


12



 
13

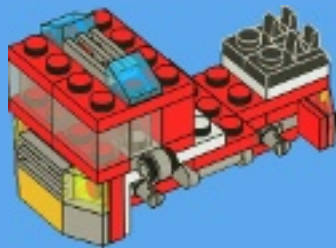


1

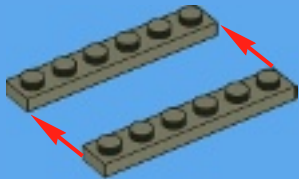 



2

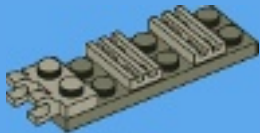 


3

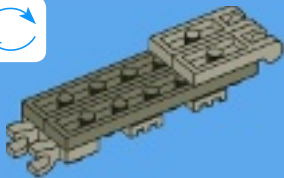 


4

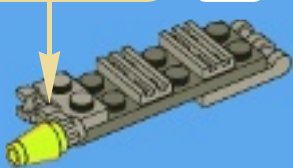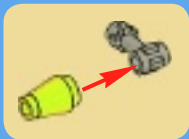  

14

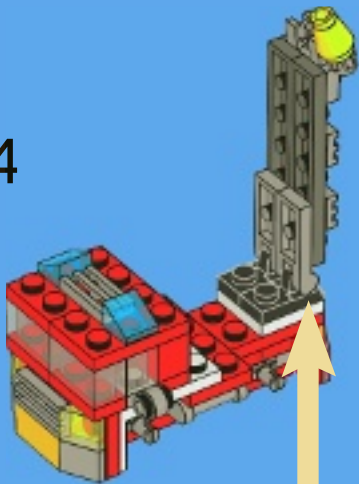 

15

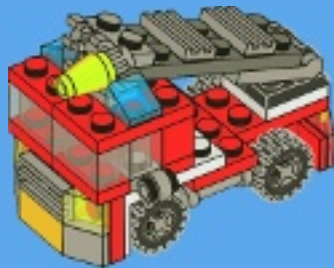 



1

 


10


2



3

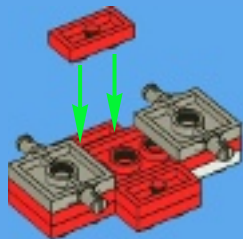


4

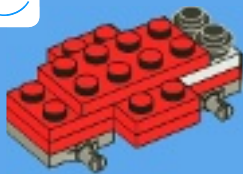 


5



 
1

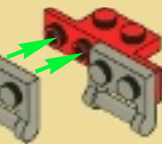



2

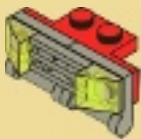 

6

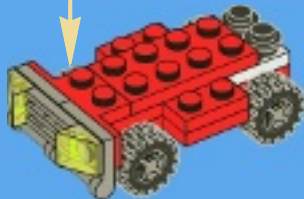 

7

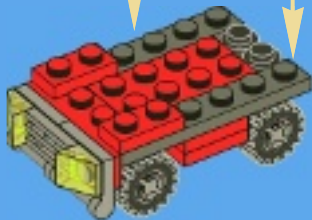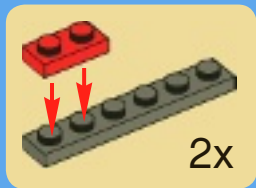  

12

8



9



10



11



14

12



13



14

 


 
15



16

16

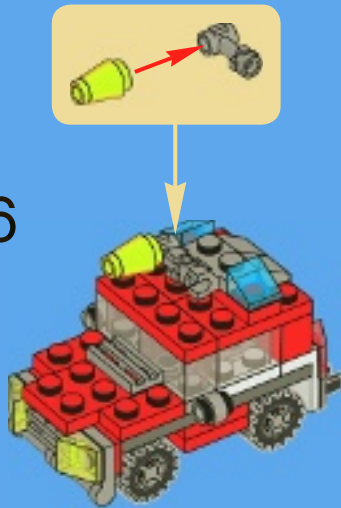


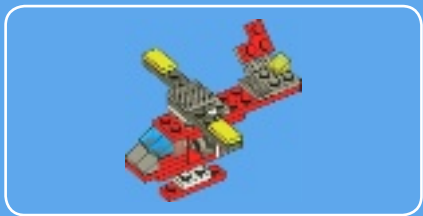

1



 
2

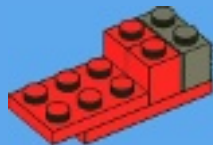

1



 
2

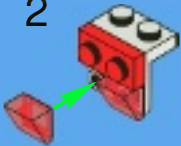


3



 3

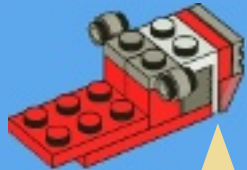


4

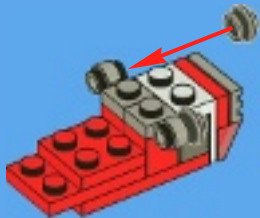 

5



 6

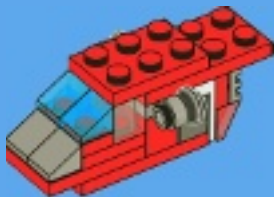


1





2



 
7

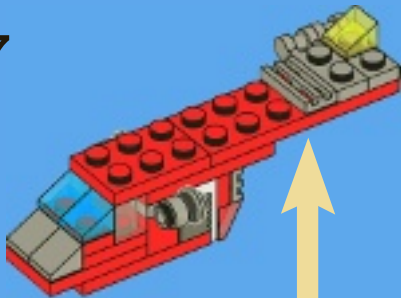


8

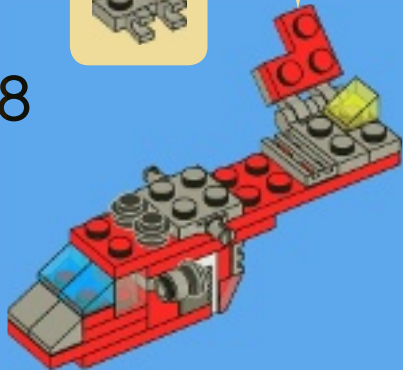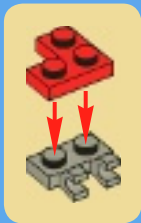  


9

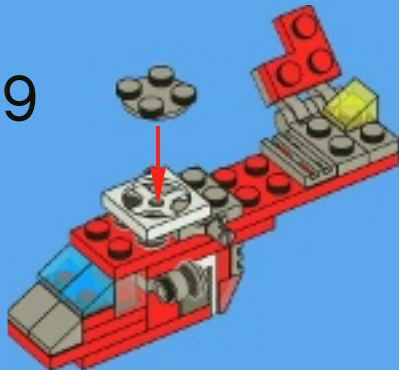 

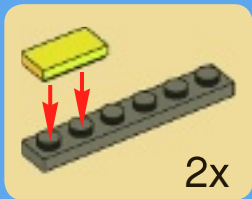 


2x

 10

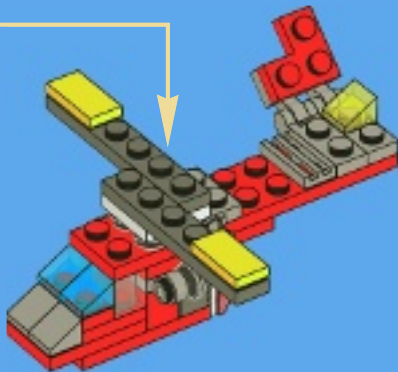


1

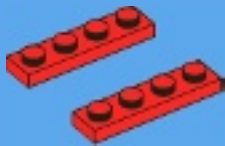 

2



 11

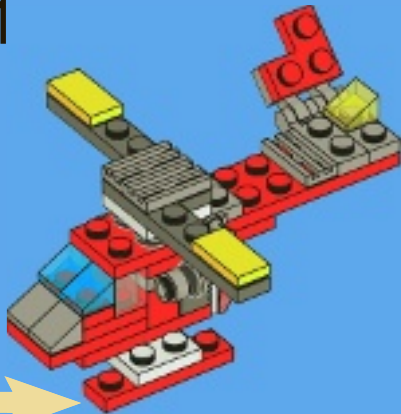



2x
300521



1x
4282742



2x
371021



1x
302001



2x
4598528



4x
4226179



2x
4211504



4x
302321



2x
242021



2x
302021



2x
4615649



4x
614126



2x
4521921



1x
4640844



1x
302221



3x
302121



1x
379521



1x
368001



4x
4578677



2x
4632575



4x
4211506



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

www.lego.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



1x
4525464



2x
4244363



2x
306924



2x
4244366



2x
4260942



1x
4556157



1x
4540203



1x
4556157



1x
4210636



2x
4244627



2x
4211056



2x
4515369



www.LEGO.com